



Debit Hold Warning Decal (DCL046A)


Placement of the decal should be as close to FastPay as possible. See below for preferred location for each dispenser type. If not possible as shown, then as close to the main display, or nozzle area as possible.

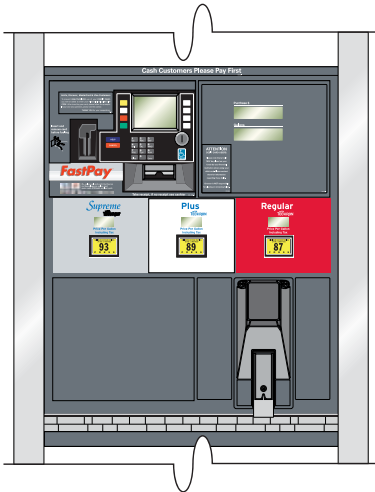


Gilbarco B78 3 Grade
Apply bottom left of main display

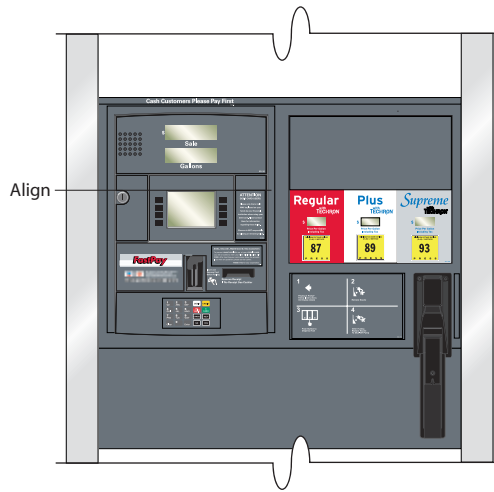


Gilbarco Encore 3+0
Apply aligned to top of display window,
centered horizontally

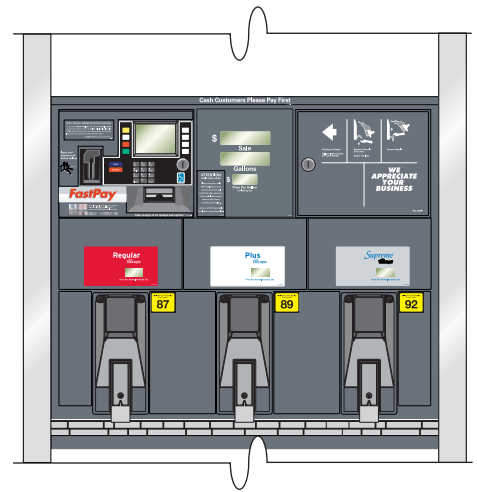

Gilbarco Advantage B05/B65
Apply bottom left of main display

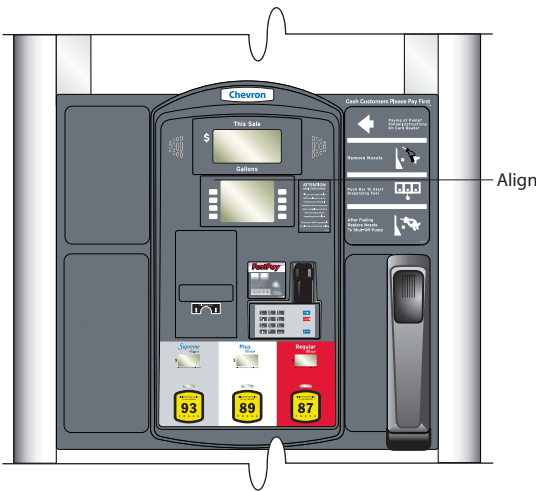

Gilbarco Encore S 3+0
Apply aligned to top of display window,
centered horizontally

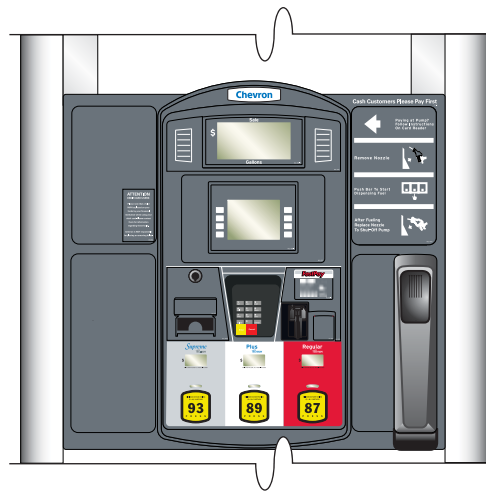

Gilbarco Encore S 3+0 (with EPP)
Apply bottom right of bezel door


Please clean the dispenser surface before applying the decal with a degreaser such as 409, Fantastik or mild detergent/soap. Be sure to rinse the cleaner off with water and then dry the surface thoroughly before applying the decal.

Chevron


Decal Placement

Debit Hold Warning Decal (DCL046A)


Placement of the decal should be as close to FastPay as possible. See below for preferred location for each dispenser type. If not possible as shown, then as close to the main display, or nozzle area as possible.

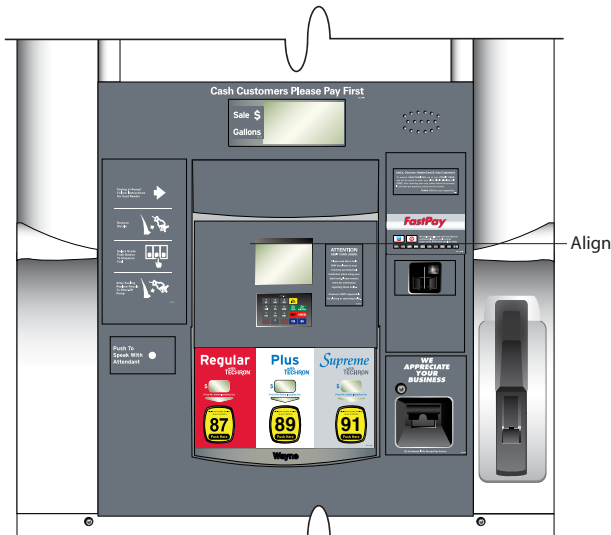

Dresser Wayne Ovation 3+0
Apply aligned to top of display window,
centered horizontally

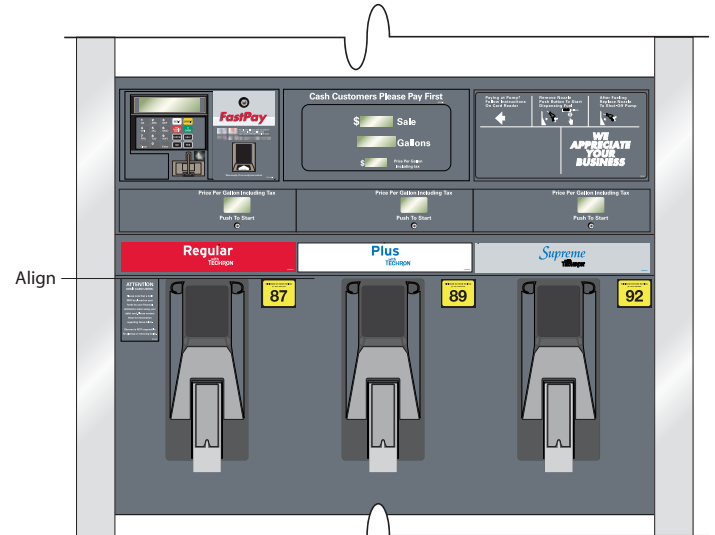

Dresser Wayne DL 390/590
Apply aligned to top of nozzle boot,
centered horizontally

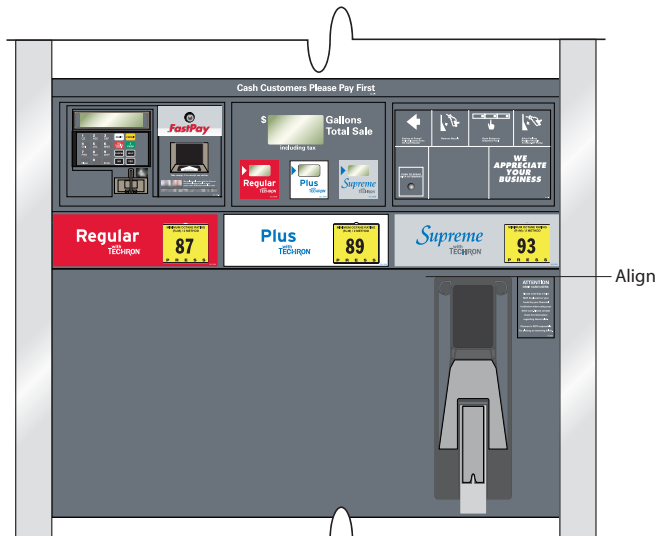

Dresser Wayne Vista 1V/2V 390U/590U
Apply aligned to top of nozzle boot,
centered horizontally

Please clean the dispenser surface before applying the decal with a degreaser such as 409, Fantastik or mild detergent/soap. Be sure to rinse the cleaner off with water and then dry the surface thoroughly before applying the decal.